
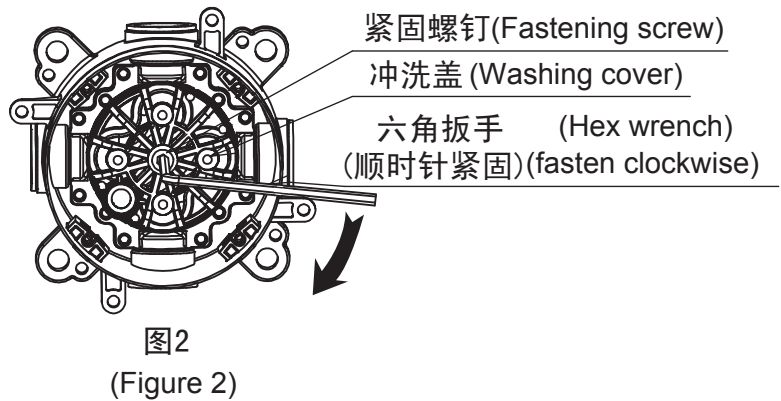


耐压施工注意书 Attentions for Pressure-resistant Construction

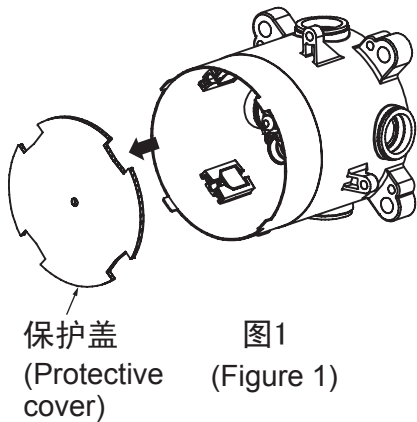

冲洗盖为配管冲洗及耐压检查用，非功能部件，在配管完了后耐压前请按下记步骤进行操作。



- 步骤：1. 按图1所示，将保护盖取下。
2. 如图2所示，用六角扳手按顺时针方向将紧固螺钉再旋紧。
3. 耐压完了后，将保护盖再放回原来位置。

The washing cover is used for piping washing and pressure resistance inspection, which is a non-functional component. Please operate to the following steps after piping completion and before pressure resistance test.

- Steps: 1. As shown in Figure 1, remove the protective cover.
2. As shown in Figure 2, use a hex wrench to tighten the fastening screw clockwise again.
3. After pressure resistance test, put the protective cover back to the original position.

0G424Y

耐压施工注意书 Attentions for Pressure-resistant Construction

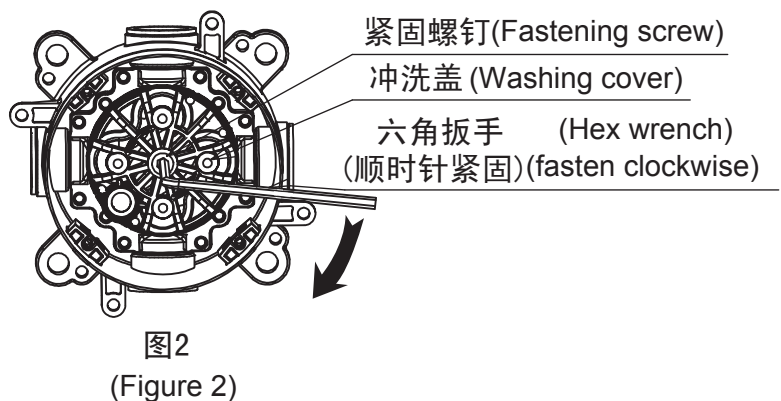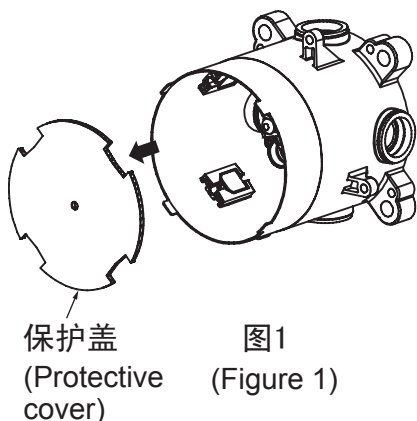

冲洗盖为配管冲洗及耐压检查用，非功能部件，在配管完了后耐压前请按下记步骤进行操作。

- 步骤：1. 按图1所示，将保护盖取下。
2. 如图2所示，用六角扳手按顺时针方向将紧固螺钉再旋紧。
3. 耐压完了后，将保护盖再放回原来位置。

The washing cover is used for piping washing and pressure resistance inspection, which is a non-functional component. Please operate to the following steps after piping completion and before pressure resistance test.

- Steps: 1. As shown in Figure 1, remove the protective cover.
2. As shown in Figure 2, use a hex wrench to tighten the fastening screw clockwise again.
3. After pressure resistance test, put the protective cover back to the original position.

0G424Y